

Quick Start Guide

G-tab

Tablet PC


NOTICE

- Do not strike the device by any hard object.
- Stop using in thunderstorm weather.
- Keep away from electric or magnetic field.
- Don't stain the device by chemicals.
- No disassembly to the device.
- Keep away from high & freezing temperature dusty or moist environment.
- Recommend lower volume to avoid any ear damage.
- Do not leave the device inside a car with all windows closed.
- Do not update firmware without professional guidance. The manufacturer is not responsible for the device damage caused by a user's private firmware updating.

 Note: Please use the original charger.


1. Main screen

Main screen can be placed on the most commonly used applications, you can also display daily information such as the time, the weather (need third-party applications.), date, etc.

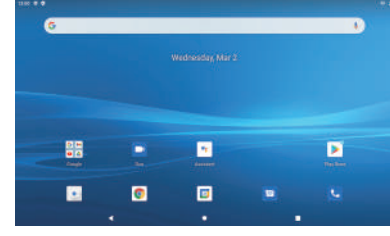


2. FM Radio

With the FM Radio, you can search for radio channels, listen to them, and save them on your Tablet PC.

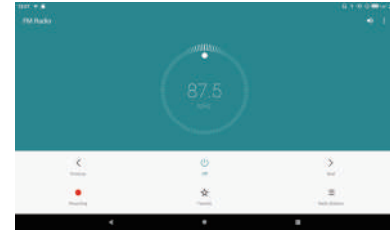

3. Notification

Notification icons inform you of new messages and events, when you receive a notification, its icon appears in the status bar, along with a summary that appears only briefly.

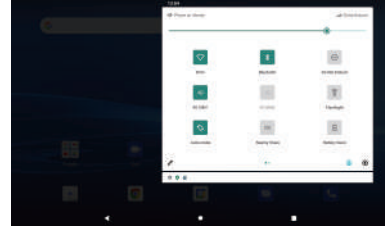


4. Camera

Camera pictures and videos can be stored in your Tablet PC.




5. Gallery Go

Gallery Go. Gallery Go is a light, fast and easy to use offline gallery. You use Gallery Go to view pictures that you've with camera, downloaded. You can perform basic editing tasks on pictures and set them as your wallpaper or contact picture.

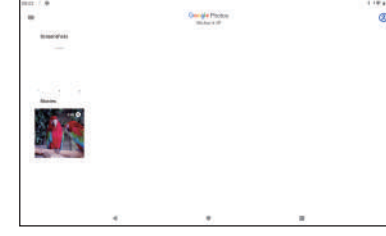


6. WI-FI

To browse the web, you need switch on Data connection. If there is WI-FI around, you can switch on WI-FI to use it browse the web some may need password.

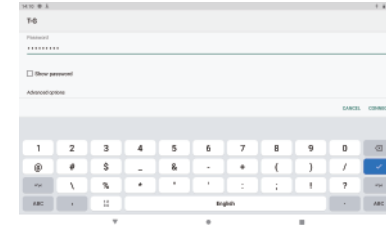

7. Music

You can download music via the Internet. Music player will automatically recognize the file.

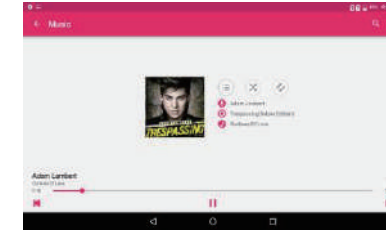

WARRANTY

- All products will be given days, REPLACEMENT warranty but to factory defects only.
- Company provides a 13 months free service warranty from the date of purchase.
- Service warranty covers repair cost but does not include cost of parts such as LCD BOARD and any other parts of the unit. This warranty excludes all accessories charger, cable headset. But a provision for a replacement is hereby given from the date of purchase against manufacture's defect.
- This warranty excludes the following circumstances;
 - The product have been repaired, serviced, modified by a third party.
 - Damage/ defect results from mishandling, incorrect usage or from natural disaster.
- Service charge will be imposed from those units that are voided and out of warranty.
- The warranty is valid only to the original purchaser with a proof of purchase from authorized dealer. Date of purchase must be clearly, identified.
- The service request from should be property accomplished and forwarded to the Principal for the unit to be recognized and honored by service center.

WARRANTY CARD طاعة الضمان	
INFORMATION معلومات	
Name اسم	
Address عنوان	
Contact Number رقم الاتصال	
Model Number رقم الموديل	
Serial Number رقم التسلسل	
Store/Dealer التاجر / متجر	
Invoice Number رقم الفاتورة	
Email Address عنوان البريد الإلكتروني	
Date of purchase تاريخ الشراء	
Dealer's Company Stamp ختم شركة التاجر	
Customer signature توقيع العميل	

ضمان

- سوف يغطي 7 ايام ضمان ولكنها تقتصر على عيوب المصنع
- الشركة تعطي 13 اشهر صيانة مجانية من تاريخ الشراء
- خدمة الضمان يغطي تكلفة إصلاح ولكن لا تشمل تكلفة أجزاء مثل الشاشة القاسية وأية أجزاء أخرى من الوحدة. هذا الضمان يستبعد جميع الملحقات شاحن، كابل ساعة ولكن ينص على استبدال بدليل بموجب هذا من تاريخ الشراء ضد عيب تصنيع
- هذا الضمان يستثنى الظروف التالية:
 - إصلاح المنتج، خدمتها، تعديلها من قبل طرف ثالث
 - الأضرار / العيب الناتج عن سوء الاستخدام غير صحيحة أو من الكوارث الطبيعية.
- سيتم فرض رسوم الخدمة من تلك الوحدات التي يتم تجزئها والخروج من الضمان.
- الضمان صالح فقط للمشتري الأصلي مع إثبات الشراء من تاجر المصنع. يجب أن يكون واضحاً من الشراء.
- يجب أن يكون طلب الخدمة من الممتلكات المنقولة وتحويلها إلى مدير الوحدة ليتم الاعتراف بها وتكرهها من قبل مركز الخدمة.

٧ - موسيقى

يمكنك تحميل الموسيقى من الانترنت والمشغل سيتعرف عليها الاوتوماتيكياً

٥ - الاستوديو

يمكنك الاستخدام الاستوديو لعرض الصور والملقطه من الكاميرا والتي تم تحميلها و يمكنك تعديلها وحفظها كورق الحائط او تضعها على جهاة الإتصال

٦ - الواي فاي

يمكن تصفح الويب , تحتاج لتحميل البيانات اذا كان هناك شبكة واي فاي قوية منك بعض الشبكات تحتاج لكلمة سر

٣ - الأشعارات

إيقونة الاشعارات تنبهك للرسائل الجديدة والمناسبات عندما تتلقى اشعار , إيقونة تظهر ملخص موجز عن الحالة .

٤ - الكاميرا

يمكنك تخزين اشربة الفيديو والصور على هاتفك

١ - الشاشة الرئيسية

يمكن ان تضع اكثر التطبيقات الاستخدام اليومي مثل , الوقت و الطقس (التطبيقات الجزء الثالث) التاريخ, وقت ..


٢ - راديو FM

يمكنك استخدام راديو FM , البحث عن قنوات الراديو و الاستماع إليها وحفظها على الكمبيوتر اللوحي

الملاحظات

- لا يرضب الجهاز لأي شيء صلب
- توقف عن الاستخدام في طقس العواصف الرعدية
- ابقه بعيداً عن المجالات كهربية والمغناطيسية
- لا تلوث الجهاز بأي مواد كيميائية
- لا تفتح الجهاز
- ابقه بعيداً عن درجات الحرارة العاليه و الرطوبة والتجمد
- يوصى بتجنب الضوضاء لعدم إلهاء اذنيك
- لا تترك الجهاز في سيارة وتوافدها مغلقة
- لا يتم تحميل اي برامج بدون توجيه ممني , المصنع ليس مسؤول عن اي ضرر يسبب تحميل البرامج الخاصة.

ملاحظة: يرجى استخدام الشاحن الأصلي للشحن



G-TAB迪拜说明书尺寸: 70x125<mm>, 四色印刷/折页+128G双铜

料号: 602.0000670125